



Trex[®] Protect[™]

JOIST, BEARER & RIM TAPE

TREX JOIST, BEARER & RIM TAPE INSTALLATION

PREPARATION

- » Trex Protect Joist & Bearer Tape can be applied to horizontal and vertical surfaces including all joists, rim joists, bearers, steps, stair stringers, blocking, ledger board, under joists hangers and other surfaces.
- » When pulling deck boards onto the deck, a piece of plywood or wafer board can be used to overhang the edge of the deck. This will prevent the product from rolling up and pulling up from the joist.
- » Trex Protect tape has three widths making it convenient to apply to all wood surfaces.
 - Use 50 mm x 20 m Joist Tape for joists
 - Use 100 mm x 20 m Bearer Tape for double bearers
 - Use 279.4 mm x 15.24 m Rim Tape for rim joists, stairs and all flat-blocked surfaces

NOTE: *Trex Protect cannot be used to install Trex RainEscape*

INSTRUCTIONS

STEP 1




- » Clean the timber surface making sure it is dry and free of any debris.

STEP 2

- » Remove the backing while applying the tape directly to the surface. Run your hand over the tape and firmly press it on to the timber surface.

STEP 3

- » After covering the timber surface and bearers with tape, cut the tape to length with a utility knife.

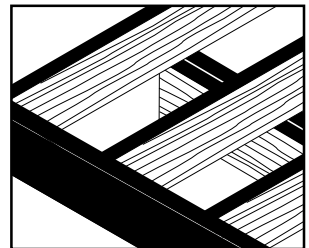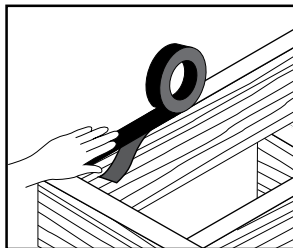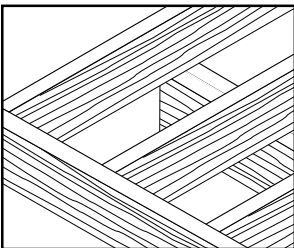

For more information, visit trexprotect.com/uk

© 2022 Trex Company, Inc. All rights reserved. Trex[®] RainEscape[®] products are manufactured and sold by IBP, LLC under a Trademark License Agreement with Trex Company, Inc. RainEscape[®] is a federally registered trademark of IBP, LLC.

Scan for
installation video

